



DISPLAY

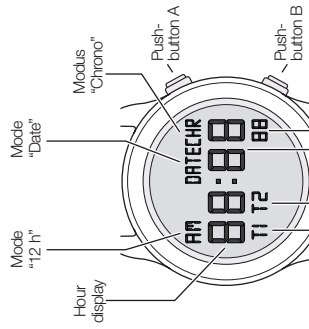

NAVIGATION

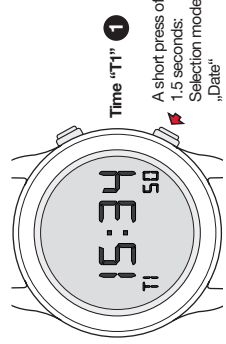

Time "T1" 1
A short press of 1.5 seconds: Selection mode "Date".



Datum 2
A short press of 1.5 seconds: Selection mode "Chrono".
The date is displayed 3 seconds with automatic return to mode T1 at the end of this time.




Chrono 3
A short press of 1.5 seconds: Selection mode "Time T2".




Time "T2" 4
A short press of 1.5 seconds: Selection mode "Time T1".

SETTINGS

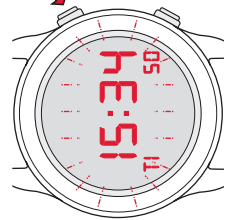


1
A longer press of 2.5 seconds: Display flashes.

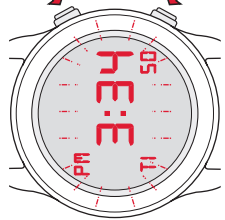

2
A short press: Selection display "12h" or "24h" (Display flashes).


C

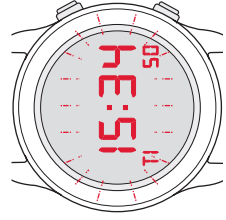


3
A longer press of 2.5 seconds: Display "Year" (great).



4
A short press: Display "Year" changes: Pushbutton A: + Pushbutton B: - (Display flashes).

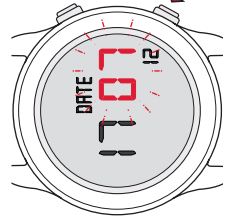

5
A longer press of 2.5 seconds: Display "Month" flashes.

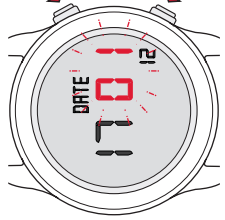

6
A short press: Display "Month" changes: Pushbutton A: + Pushbutton B: - (Display flashes).

ETA K18.401


ETA SA Manufacture Horlogère Suisse
depuis 1793

593.667 - 24.09.2015 / ETA / 01

SETTINGS (cont.)



7
A longer press of 2.5 seconds: Display "Date" flashes.

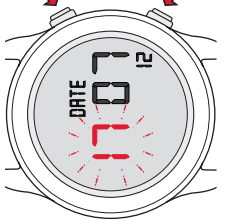


8
A short press: Display "Date" changes: Pushbutton A: + Pushbutton B: - (Display flashes).

C




13
A longer press of 2.5 seconds: Display "Second" flashes.

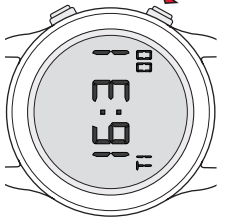


14
A short press: Synchronization of display "Second".

D


TIMING MODE
Split-time or intermediate time function

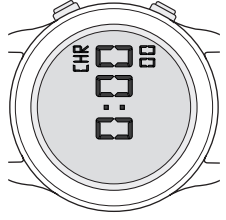


1
START:
A short press: Display: Minutes, seconds, 1/100 second.

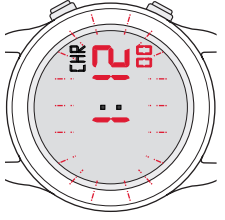

2
A short press: Display the "intermediate time 1". (Display flashes, time continues in the background).

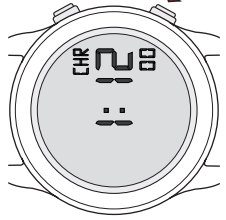

3
RESTART: (split second)
A short press.

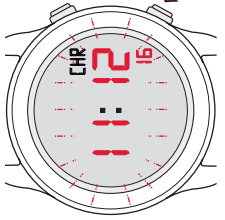

4
A short press: Display the "intermediate time 2". (Display flashes, time continues in the background).




5
RESTART: (split second)
A short press.



6
END TIME:
A short press: Display the end time.

D


TIMING MODE (cont.)
Split-time or intermediate time function

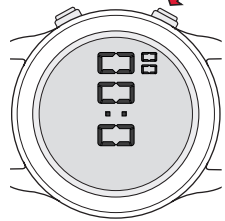


7
RESET TO ZERO:
A short press.

E


TIMING MODE
ADD Function

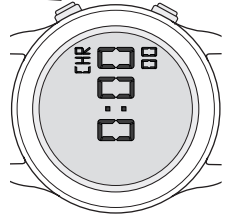


1
START:
A short press: Display: Minutes, seconds, 1/100 second.

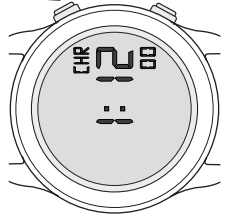


2
A short press: Stops the timer. (The time does not continue in the background).

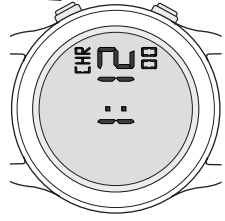

3
RESTART:
A short press.

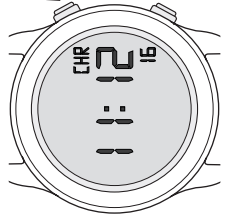

4
A short press: Stops the timer. (The time does not continue in the background).

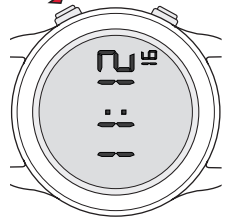

5
RESTART:
A short press.




6
END TIME:
A short press: Display the end time.


7
RESET TO ZERO:
A short press.

E

TIMING MODE
ADD Function

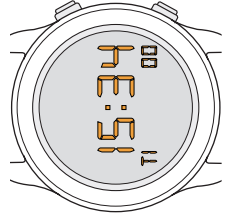


A short press of 1.5 seconds: Backlight for mode T1, T2, Date (Duration of backlight: 5 seconds).

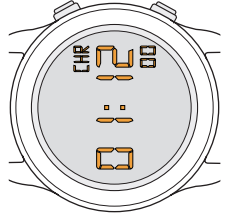

A short press of 1.5 seconds: Backlight for mode Chrono (Duration of illumination performance: 5 seconds).

F


HINTERGRUND-BELEUCHTUNG

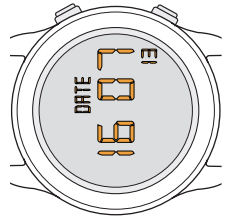

Switching to setting mode automatically activates the backlight. This remains on for 5 seconds, or throughout if the user leaves no more than 5 seconds between operating steps.

G

END OF LIFE (EOL)

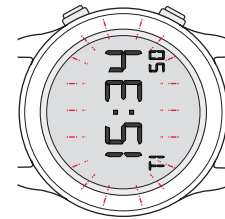

The display flashes every 4 seconds (in mode: T1, T2, date, chrono, settings).